


9004, 9007, H13 Bi-xenon HID Kit Install Diagram

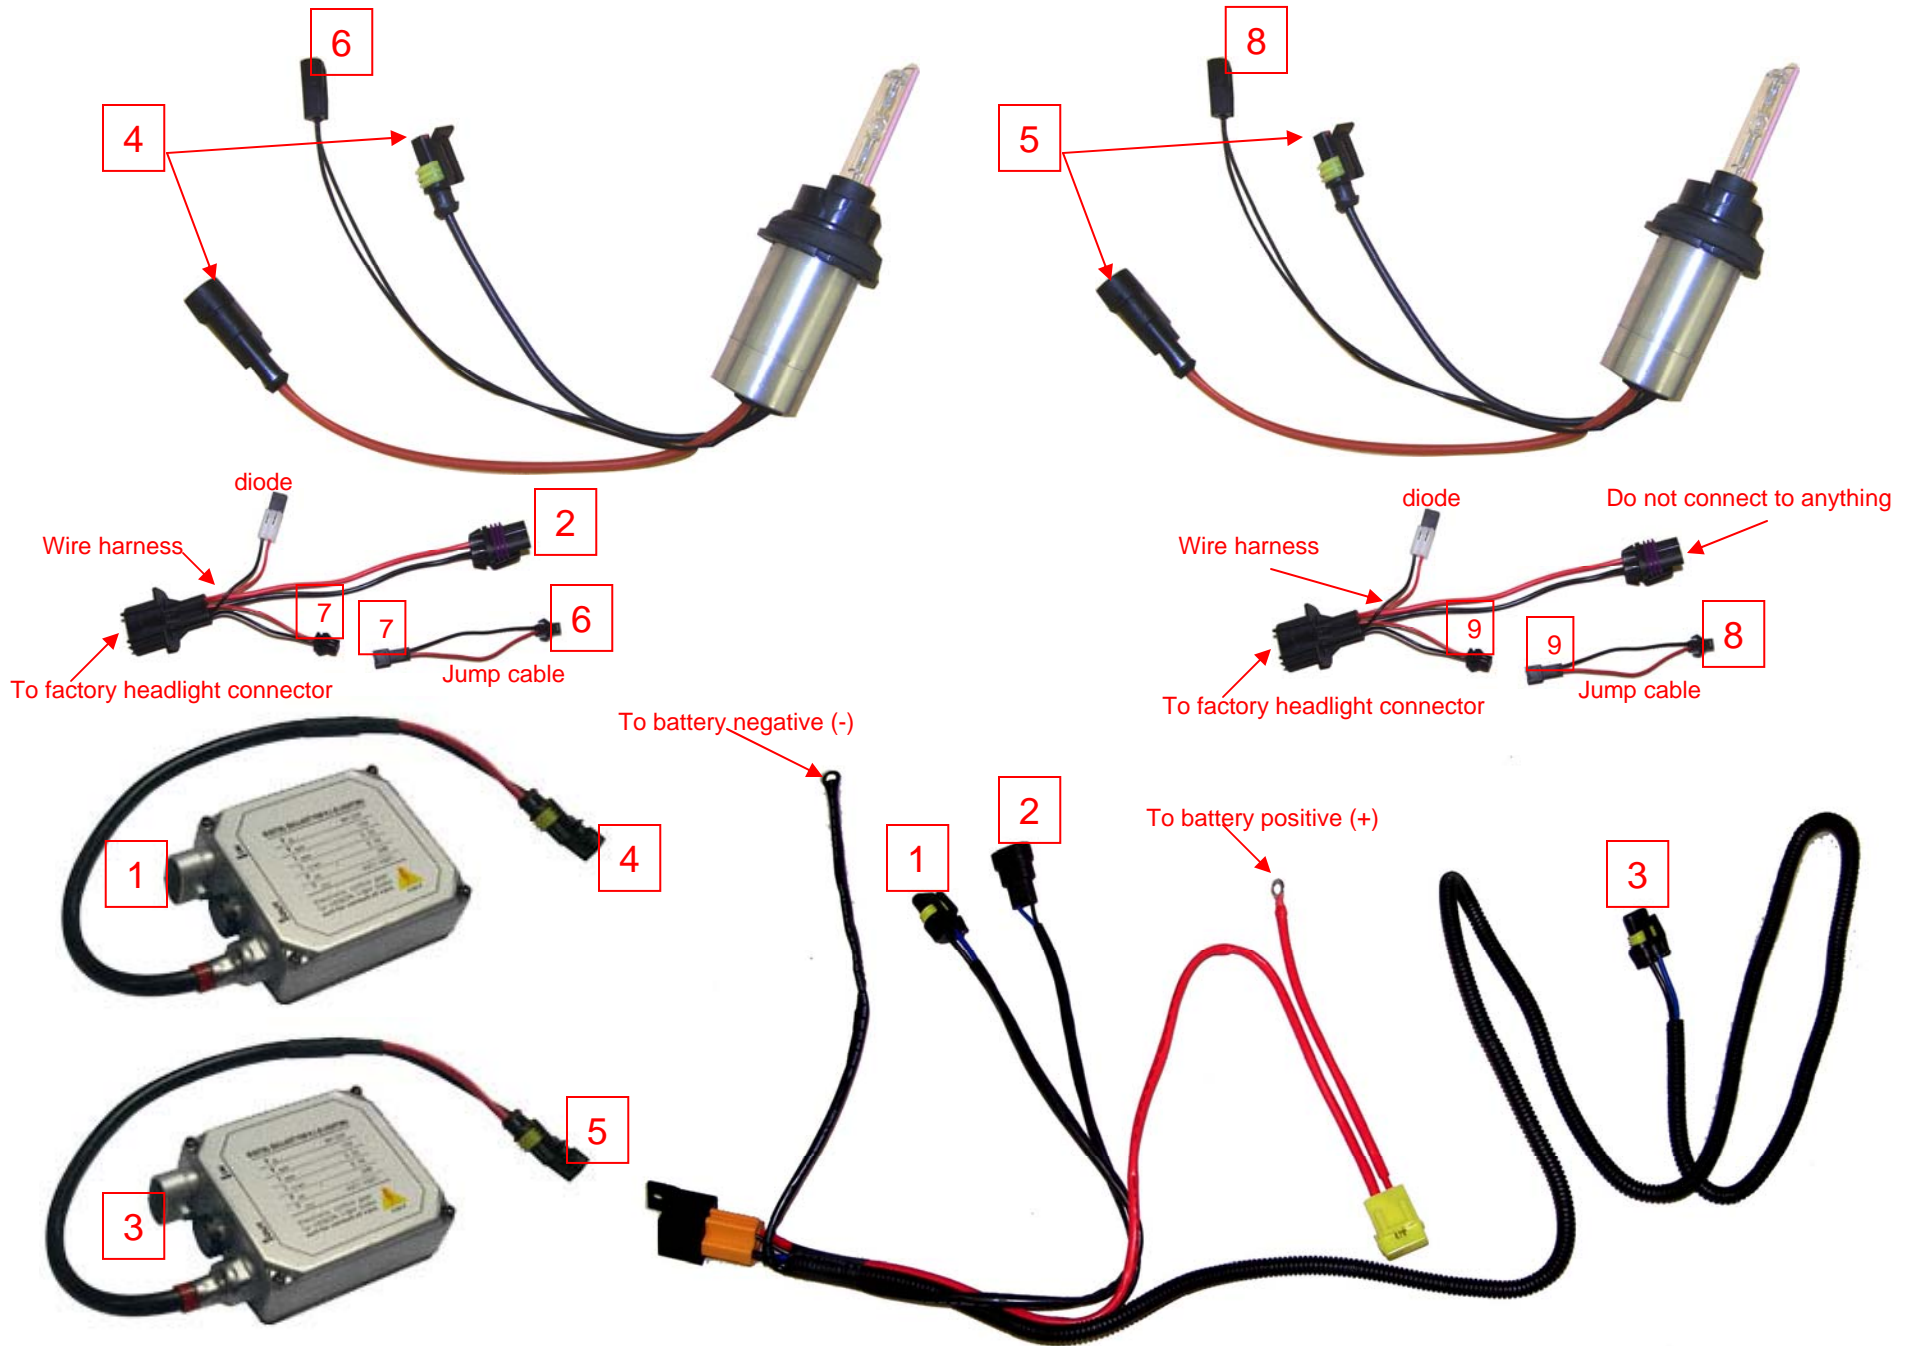

Installation Notes :

1. Please connect the connectors with matching numbers in the diagram.

Example : 1 connects to 1

2. If everything is connected properly, and the lights are not functioning
(example: high beam low beam are reversed, or only high or low beam works),
please try the following :

a. Reverse the diode : pull out the diode and reverse it, and insert back in. Please do it for both sides.

b. Disconnect 7 and 9 at jump cable.
reconnect 6 (from the bulb) to 7 (from wire harness), reconnect
8 (from the bulb) to 9 (from wire harness).