

The Progress Group, Inc.
1265 N. Grove St.
Anaheim, CA 92806
714 630-9017 Phone
714 630-9018 Fax

INSTALLATION INSTRUCTIONS

Progress Technology Anti-Sway Bar

Scion xA –xB (Rear) # 62.2170


Rev. B 3/29/06

NOTE: Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.

Parts List

<u>Item</u>	<u>Quantity</u>
Anti-roll bar (22 mm)	1
M10 x 1.5 x 30 FHCS	4
Nut Plate	2
M10 USS Flat washer	4
Instruction Sheet	1

1. Park vehicle on a smooth, level, asphalt or concrete surface. Block front wheels. Jack up rear end of car and support with jackstands. Remove wheels and tires.
2. Place bar under the rear beam. Align the holes on the bar with the holes on the rear beam. Insert the flag nuts in the beam as shown, and install two bolts and washers (per side). Tighten all hardware to 45 ft/lbs.

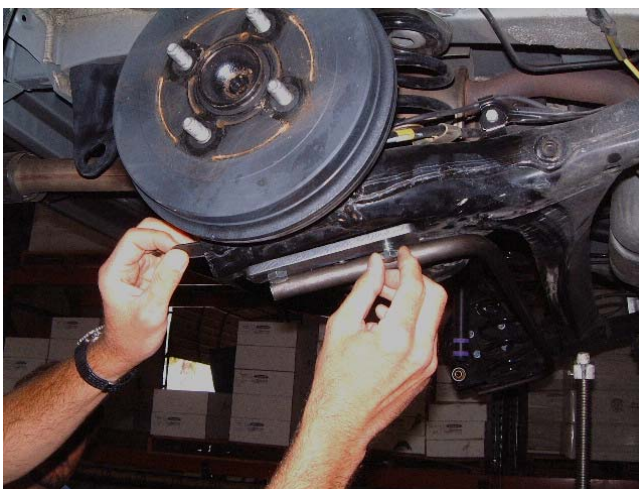

3. Install and tighten wheels and tires to factory specifications. Lower rear of car onto ground, and roll car back and forth to settle suspension.
4. Installation is complete. Check assembly periodically for tightness.

Thank you for choosing Progress products. For additional product and technical information, visit our website at www.progressauto.com